


SunRise Solar Curb Base Fan Flat Roof Installation

Models: CB 850 FT, CB 1050 FT, CB 1250 FT, CB 1650 FT, CB 1650 TLT FT*

NOTE: For best operation install solar fan where it will receive direct sunlight.



1) Cut 16 1/2" hole through roof.

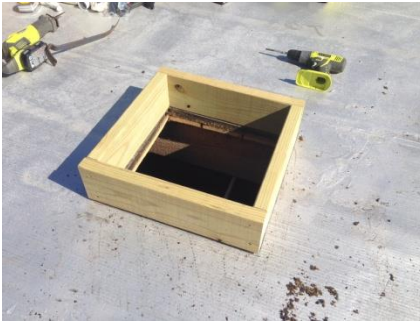


2) Build 19 1/2" square curb.



3) Fasten curb to roof.



4) Flash curb with membrane.

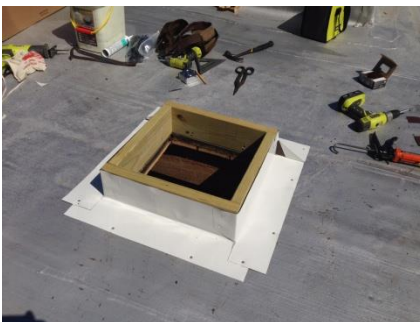

5) Flash curb with metal.



6) Install membrane over metal.



7) Mount fan to curb.



8) Fasten fan to curb.



9) Coat flashing with roof paint.



SunRise Solar Attic Fans
PO Box 53
Saint John, IN 46373
(219) 558-2211
www.sunrisesolar.com

* Model shown: CB 1650 TLT FT