



Replacing a SunRise Solar Fan Motor

Retrofit installation instructions

Contents:


- (1) Solar Fan Motor
- (1) Wire tie



Scan this code with your phone's camera to access YouTube "How To" video.

To remove and replace the motor:

- A) Remove the (4) 5/16" screws holding the fan top and base flashing together.
- B) Slide the top out of the base.
- C) Turn the fan over and remove the wire connectors from the motor. **Use caution when removing the wire connectors from the tabs on the motor – pull straight off to avoid bending or breaking the tabs.**
- D) Now loosen both 7/16" bolts holding the motor in place and slide the motor out to the farthest point – this will allow you to reach the set screw on the top side of the fan blade.
- E) Loosen the set screw with a 1/8" allen wrench, allowing fan blade to fall off.
- F) Insert the new motor, fan blade, and wire connections.
- G) If needed, remove the black wire tie on the vertical motor bracket arm if it is in the way of sliding the top back onto the base.
- H) Slide base back onto motor brackets. If wire tie was removed in Step (G), use the wire tie provided to secure the wire to the side of the motor bracket.

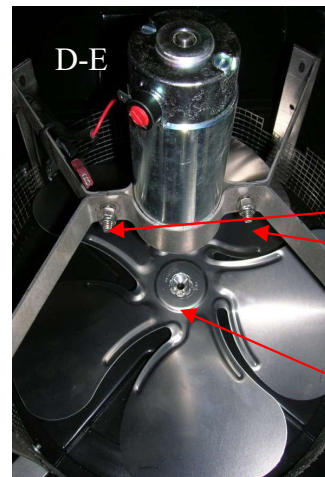

Loosen these 2 bolts to slide motor.

Set screw is on top side of fan blade.

Questions:

SunRise Solar Attic Fans
219-558-2211

info@sunrisesolar.net

